


Hot line proximity detector

Auxiliary voltage detection device that gives alarm sounding at a distance when approach to a live line.

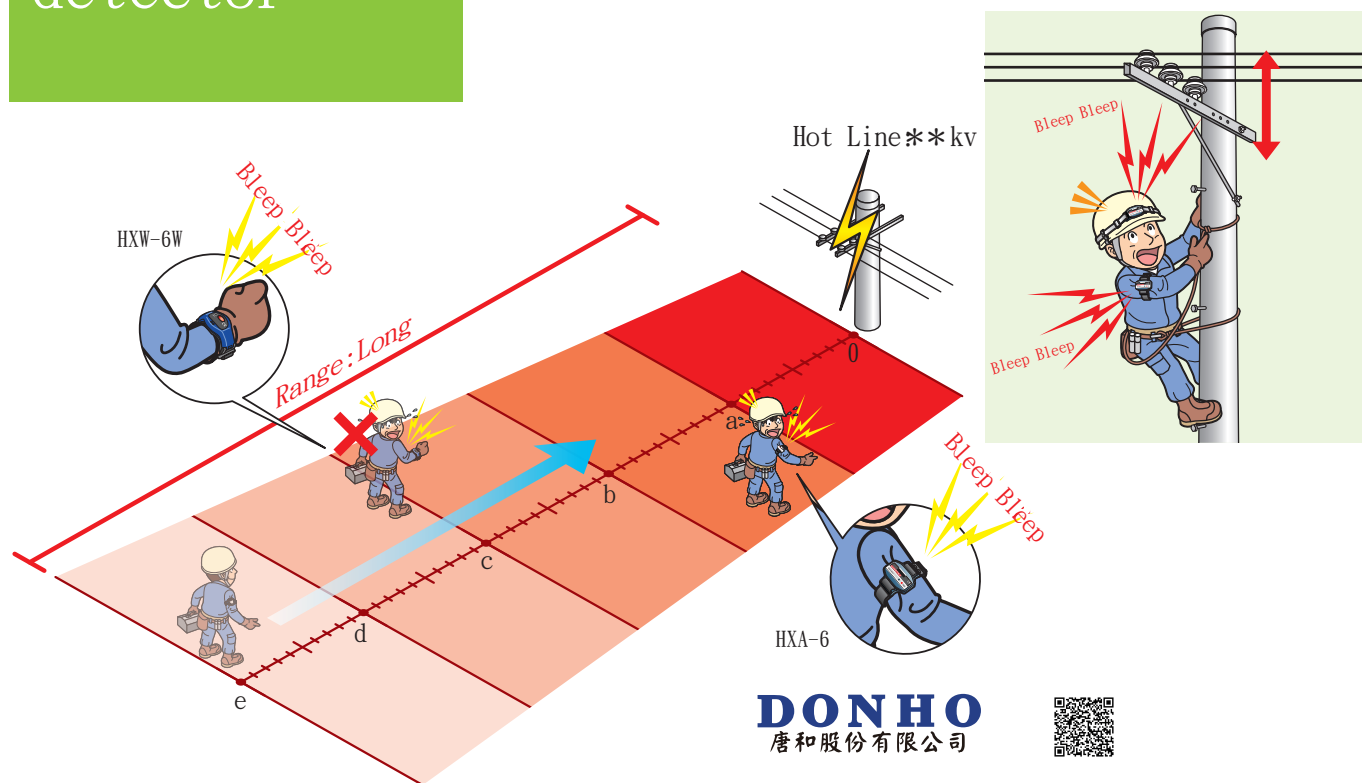

DONHO
唐和股份有限公司

台北總公司
台北市內湖區瑞光路618號8樓
02 2627 1088

台中分公司
台中市西屯區朝富路213號22樓-2
04 2252 5037

高雄分公司
高雄市楠梓區德民路220號
07 365 1388

HXA-6 HXA-6 S

AC 11kV



HXA-6 (Upper arm fitting type) HXA-6S (Helmet fitting type)



Hot line proximity detector exclusively for overhead line works

【Attention】
This is not suitable for cable works

Specifications

Model	HXA-6	HXA-6S
Location of use	Exclusive for work with overhead lines	
Alarm starting distance (Under standard condition)	80cm	110cm
Frequency	Either 50 Hz or 60 Hz, whichever is designated	
Sound volume	65dB or more (1m apart)	
Battery	JIS CR2032(3V) x 1 pcs	
Battery life (with new battery)	Continuously operating state	About 50 hr.
	Unused state	About 2 years
Operating temperature range	-10℃ ~ +40℃	

Operation Voltage Distance Table (Theoretical value)

Normal Voltage (kV)	Operation Distance	
	HXA-6	HXA-6S
6.6kV	0.8m	1.1m
11kV	1.0m	1.4m
22kV	1.5m	2.0m
33kV	1.8m	2.5m

Operation Voltage-distance table and graph are theoretical value.

Operation distance is varied depending on the actual surrounding environment.

Please confirm operation distance in actual use environment before using.

Operation Voltage Distance graph (Theoretical value)

