


Product

KCC 0803S




KCC-0803S is a crimping tool for coaxial connectors, Hex 3.25 mm, 4.52 mm, 5.41 mm, 1.69 mm, 1.07 mm, Sqr 0.7 mm crimp/.128", .178", .213", .067", .042", .028".

- High strength, through hardened alloy steel construction
- Unique mechanism significantly reduces hand force requirement over competing crimping tools
- Versatile and easy to customize for right hand or left hand users.
- Non-slip pad holds tool in place when leveraging on a work surface
- Full cycle crimp mechanism to ensure consistent, reliable crimp
- Ratchet release mechanism to clear miscrimps and obstructions
- Precision eccentric adjustment for consistent performance and ability to calibrate
- Hole in handle allows attachment of safety strap
- Each tool has a unique serial number for traceability.

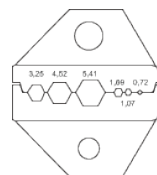

Die profile

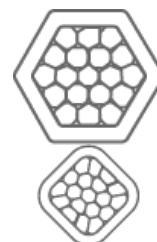

Crimp profile

TECHNICAL DATA

Length: 204 mm/8.03"

Width: 22 mm/0.87"

Height: 76 mm/2.99"

Weight: 500 gr/1.1 lb

Crimp dimensions mm/mm²:

3,25 mm/4,52 mm/5,41 mm/1,69

mm/1,07 mm/0,70 mm sqr,

Crimp dimensions inch/AWG:

.128"/.178"/.213"/.067"/.042/.028"

Connector: Coaxial connector

Description: For example coax

BNC, TNC connectors on RG 58,

174, 188, 316.

Life span, cycles: 50,000

Cables: RG122/U, RG142B/U,

RG174A/U, RG179B/U, RG180B/U,

RG187A/U, RG188A/U, RG223/U,

RG279/U, RG302/U, RG303/U,

RG316/U, RG58C/U