


Product

KCC 7010HDS




KCC-7010HDS is a coaxial crimping tool for coaxial connectors HDTV, BNC and TNC on Belden 1855A, 1865A, 1505A, 1505F, 1694A, 1694F.

- High strength, through hardened alloy steel construction
- Unique mechanism significantly reduces hand force requirement over competing crimping tools
- Versatile and easy to customize for right hand or left hand users.
- Non-slip pad holds tool in place when leveraging on a work surface
- Full cycle crimp mechanism to ensure consistent, reliable crimp
- Ratchet release mechanism to clear miscrimps and obstructions
- Precision eccentric adjustment for consistent performance and ability to calibrate
- Hole in handle allows attachment of safety strap
- Each tool has a unique serial number for traceability

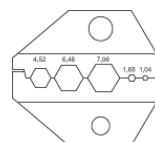

Die profile

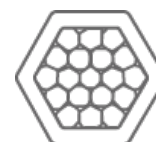

Crimp profile

TECHNICAL DATA

Length: 204 mm/8.03"

Width: 22 mm/0.87"

Height: 76 mm/2.99"

Weight: 500 gr/1.1 lb

Crimp dimensions mm/mm²:

7,06/6,48/4,52/1,68/1,04

Crimp dimensions inch/AWG:

.278/.255/.178/.066/.041

Connector: CATV and Coaxial connector

Description: For example HDTV BNC/TNC connectors on Belden 1855A, 1865A, 1505A, 1505F, 1694A, 1694F.

Life span, cycles: 50,000

Cables: 1695, RG108A/U, RG122/U, RG142B/U, RG180B/U, RG210/U, RG279/U, RG303/U, RG59B/U, RG62A/U, RG62B/U, RG71B/U

Tool shown is an example only, for correct die profile please look at the illustration to the right.