


Product

KCC 9117




KCC-9117 is a crimping tool for CATV connectors, 8.23 mm, 9.14 mm, 1.73 mm/.360", .324", .068", HEX-Crimp.

- High strength, through hardened alloy steel construction
- Unique mechanism significantly reduces hand force requirement over competing crimping tools
- Versatile and easy to customize for right hand or left hand users.
- Non-slip pad holds tool in place when leveraging on a work surface
- Full cycle crimp mechanism to ensure consistent, reliable crimp
- Ratchet release mechanism to clear miscrimps and obstructions
- Precision eccentric adjustment for consistent performance and ability to calibrate
- Hole in handle allows attachment of safety strap
- Each tool has a unique serial number for traceability

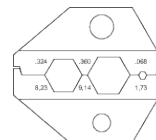

Die profile

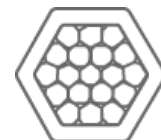

Crimp profile

TECHNICAL DATA

Length: 256 mm/10.08"

Width: 22 mm/0.87"

Height: 80 mm/3.15"

Weight: 555 gr/1.22 lb

Crimp dimensions mm/mm²:

9,14 mm/8,23 mm/1,73 mm

Crimp dimensions inch/AWG:

.360"/.324"/.068"

Connector: CATV connector

Description: For example Twinax, CATV, F on RG 6, RG 6 Quad, 1695, Twinax.

Life span, cycles: 50,000

Cables: 1695, RG 6, RG143A/U, RG212/U, RG222/U, RG6 Quad, RG6A/U, TWINAX