


Product

KKB-0360S




KKB-0360S is a crimping tool for non insulated connectors, 0.35-6.0 mm²/AWG 22-10, Indent-Crimp.

- High strength, through hardened alloy steel construction
- Unique mechanism significantly reduces hand force requirement over competing crimping tools
- Versatile and easy to customize for right hand or left hand users.
- Non-slip pad holds tool in place when leveraging on a work surface
- Full cycle crimp mechanism to ensure consistent, reliable crimp
- Ratchet release mechanism to clear miscrimps and obstructions
- Precision eccentric adjustment for consistent performance and ability to calibrate
- Hole in handle allows attachment of safety strap
- Each tool has a unique serial number for traceability

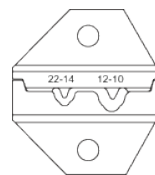

Die profile

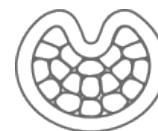

Crimp profile

TECHNICAL DATA

Length: 204 mm/8.03"

Width: 22 mm/0.87"

Height: 76 mm/2.99"

Weight: 500 gr/1.1 lb

Wire size: 0.35-6 mm² / AWG 22-AWG10

Crimp dimensions mm/mm²:
0,35 - 2,5 mm²/4 - 6 mm²

Crimp dimensions inch/AWG:
AWG 22 - 14/AWG 12-10

Connector: Uninsulated connectors

Description: For uninsulated copper tube and copper sheet connectors.

Life span, cycles: 50,000