


Product

DSA 0725




DSA-0725 is a crimping tool for insulated connectors, 0.75 - 2.5 mm²/AWG 22 - 14 (red, blue), Oval-Crimp.

- High strength, through hardened alloy steel construction
- Versatile and easy to customize for right hand or left hand users
- Full cycle crimp mechanism to ensure consistent, reliable crimp
- Ratchet release mechanism to clear miscrimps and obstructions
- Precision eccentric adjustment for consistent performance and ability to calibrate
- Each tool has a unique serial number for traceability

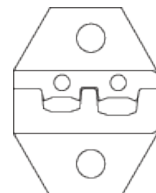

Die profile



Crimp profile

TECHNICAL DATA

Length: 198 mm/7.8"

Width: 18 mm/0.71"

Height: 59 mm/2.32"

Weight: 354 gr/0.78 lb

Wire size: 0.75-2.5 mm² / AWG 22-AWG 14

Crimp dimensions mm/mm²:
0.75 - 1.5 mm² (red)/1.5 - 2.5 mm² (blue)

Crimp dimensions inch/AWG:
AWG 22 - AWG 16/AWG 16 - AWG 14

Connector: Insulated connectors
Description: For pre insulated red and blue connectors.

Life span, cycles: 50,000