


Product

KWB 4099



KWB-4099 is a crimping tool for non insulated connectors, 4-10 mm²/AWG 12-8, W-Crimp.

- High strength, through hardened alloy steel construction
- Unique mechanism significantly reduces hand force requirement over competing crimping tools
- Versatile and easy to customize for right hand or left hand users.
- Non-slip pad holds tool in place when leveraging on a work surface
- Full cycle crimp mechanism to ensure consistent, reliable crimp
- Ratchet release mechanism to clear miscrimps and obstructions
- Precision eccentric adjustment for consistent performance and ability to calibrate
- Hole in handle allows attachment of safety strap
- Each tool has a unique serial number for traceability

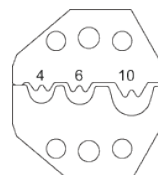

Die profile



Crimp profile

TECHNICAL DATA

Length: 256 mm/10.08"

Width: 22 mm/0.87"

Height: 80 mm/3.15"

Weight: 550 gr/1.21 lb

Wire size: 4-10 mm² / AWG 12-AWG 8

Crimp dimensions mm/mm²:
4 mm²/6 mm²/10 mm²

Crimp dimensions inch/AWG:
AWG 12/AWG 10/AWG 8

Connector: Uninsulated connectors
Description: For uninsulated copper tube and copper sheet connectors.

Life span, cycles: 50,000