


Product

Corex CX 3xx

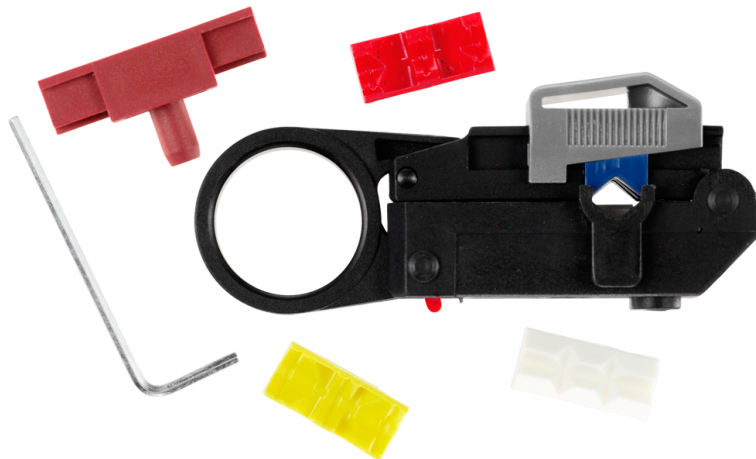


Corex CX 3xx is a stripping tool for coaxial cable, Ø 2.5-7.6 mm/0.1-0.3", 3 level stripping.

- Flexible. Strips more coaxial cable sizes (Ø 2.5-7.6 mm/0.1-0.3") than any other comparable stripper.
- Accurate. Strips most cables with machine-like accuracy. Standard cassettes produce the strip lengths required for the majority of connectors. Custom cassettes can be made to order.
- Unique setting gauge gives simple adjustment of blade height for most common cable types.
- Fast. Simply insert the cables, close and rotate to strip.
- Long-lasting. Steel blades tested for more than 1,000 strips per cassette.
- Economical. High productivity, long life and great versatility make Corex a best buy for anyone who needs to strip more than one cable size.
- Each tool is delivered with one knife cassette, four v-blocks, gauge and allen-key
- All five cassettes are available as separate items.

TECHNICAL DATA

Length: 90 mm/3.54"
Width: 25.5 mm/1"
Height: 37.5 mm/1.48"
Weight: 40 gr/0.09 lb
Wire size: 2.5-7.6 mm / 0.1"-0.3"
Stripping dimensions mm/mm²: adjustable/setting
Stripping dimensions inch/AWG: adjustable/setting
Cable: Coaxial cable
Description: Coaxial cable stripper Ø 2.5-7.6 mm/0.1-0.3
Life span, cycles: 1,000 strips per cassette

	Cassette Colour	Blade Spacing(B)	Blade Spacing(C)

CX 309	white	2,5/0.10	6,8/0.266
CX 301	brown	2,7/0.109	8,3/0.328
CX 300	black	5,5/0.220	5,5/0.220
CX 305	green	6,0/0.235	6,0/0.235
CX 399	dark brown	3,5/0.138	7,5/0.295
 * adjustable			