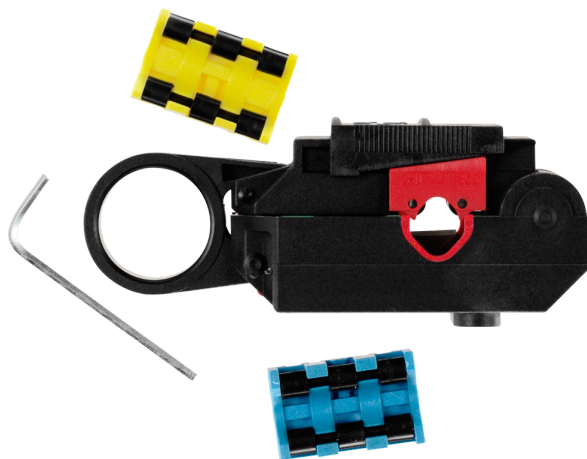


Product

Maxi Corex





Maxi Corex is a stripping tool for coaxial cable, Ø 7.0-15.0 mm/0.28-0.55", 3 blade, stripping length 9.5 + 3.2 mm/0.374 + 0.126".

- Flexible. Strips more large coaxial cables sizes (Ø 7.0-15.0 mm/0.28-0.55") than any other comparable stripper.
- Accurate. Strips most cables with machine-like accuracy. Standard cassettes produce the strip lengths required for the majority of connectors. Custom cassettes can be made to order.
- Unique. Setting gauge gives simple adjustment of blade height for most common cable types.
- Fast. Simply insert the cables, close and rotate to strip.
- Long-lasting. Steel blades tested for more than 1,000 strips per cassette.
- Economical. High productivity, long life and great versatility make Corex a best buy for anyone who needs to strip more than one cable size.
- Each tool is delivered with one knife cassette, three v-blocks and one allen-key
- Both cassettes are available as separate items.

TECHNICAL DATA

Length: 106 mm/4.17"
Width: 36 mm/1.42"
Height: 43 mm/1.69"
Weight: 81 gr/0.18 lb
Wire size: 7-15 mm / 0.28"-0.55"
Stripping dimensions mm/mm²:
adjustable/setting/9.5 mm/3.2 mm
Stripping dimensions inch/AWG:
adjustable/setting/0.374/0.126
Cable: Coaxial cable
Description: Coaxial cable stripper
Ø 7.0-15.0 mm/0.28-0.55 inch
Life span, cycles: 1,000 strips per cassette

12,7	green	12,7/0.500	
 <p>* adjustable</p>			
9,5/3,2	green	3,2/0.126	9,5/0.374
 <p>* adjustable</p>			