

R & S® ESSENTIALS

R&S® CABLE RIDER ZPH CABLE AND ANTENNA ANALYZER

Expect fast, expect efficient



Product Brochure
Version 04.01

ROHDE & SCHWARZ

Make ideas real

3 year
warranty



AT A GLANCE

The R&S®CableRider ZPH has all the essential basic measurement capabilities required for installing and maintaining antenna systems in the field. Its unique features ensure fast and efficient cable and antenna measurements and spectrum analysis. The easy-to-use analyzer features a touchscreen and large keypad designed for field use.

With its short boot and warm-up times and fast measurement speed, the R&S®CableRider ZPH gets down to analyzing extremely fast. Measurement setups can be pre-drawn and settings preconfigured. Thanks to the wizard function, fast and accurate measurements are performed in a single step. Generating measurement reports is easy with the R&S®InstrumentView software.

There is no need to calibrate the analyzer before use. It is reliably and accurately calibrated before leaving the factory. Should calibration be needed to eliminate the effects of additional cables or adapters used to connect the analyzer to the device under test (DUT), the R&S®ZN-Z103 automatic calibration unit performs the calibration in just one step.

The battery lasts up to an entire work day on just one charge. The keypad is illuminated to facilitate working in dim environments. The leading-edge capacitive touchscreen of the R&S®CableRider ZPH is changing the way users interact with an analyzer – simply touch the screen to add markers and change settings. These features and the ergonomic design make the R&S®CableRider ZPH ideal for fast and efficient on-site measurements.

Two different R&S®ZPH models are available to suit different needs, a pure one-port cable and antenna analyzer and a two-port model with additional spectrum analysis and tracking generator features.

Key facts

- ▶ Frequency range in cable and antenna analyzer mode from 2 MHz to 3 GHz or 4 GHz, upgrade via keycode
- ▶ Frequency range in spectrum analyzer mode from 5 kHz to 3 GHz or 4 GHz, upgrade via keycode
- ▶ One-port model features: DTF, return loss, VSWR and cable loss measurements
- ▶ Two-port model additionally features
 - Two-port transmission measurement
 - Spectrum analysis
 - Interference analysis
 - Signal strength mapping
 - Modulation analysis
 - Advanced gated trigger measurements
 - EMF measurement application
- ▶ Ideal for field use: up to 9-hour battery life, 2.5 kg (5.5 lb), backlit keypad, fast boot time, non-reflective display, small form factor, ruggedized housing (IP51)
- ▶ Large color touchscreen
- ▶ Measurement wizard to speed up measurements and eliminate human errors
- ▶ Easy and cost-efficient upgrades of all options via software keycode

Backlit keypad for operation in dim environments



BENEFITS AND KEY FEATURES

Fast

- ▶ Change settings quickly and easily
- ▶ Fastest measurement speed
- ▶ Fastest boot and warm-up times
- ▶ Fast measurements – no calibration required
- ▶ Fast deployment with the wizard function
- ▶ [page 4](#)

Efficient

- ▶ Single charge lasts the entire work day
- ▶ Buy what you need when you need it
- ▶ One-step calibration
- ▶ Simplify measurements with the wizard function
- ▶ Remote control with Android or iOS apps
- ▶ [page 6](#)

Standard measurement modes

- ▶ Distance-to-fault measurement
- ▶ Distance-to-fault measurement and return loss: combined measurement
- ▶ Voltage standing wave ratio (VSWR) measurement
- ▶ One-port cable loss measurement
- ▶ Phase display
- ▶ Smith chart display
- ▶ [page 8](#)

Optional measurement modes

- ▶ Power measurements with power sensors
- ▶ Channel power meter
- ▶ Pulse measurements with power sensors
- ▶ [page 10](#)

Model-specific measurement modes (two-port combi model)

- ▶ Spectrum analysis performance including tracking generator
- ▶ Modulation analysis
- ▶ Interference analysis and signal strength mapping
- ▶ Advanced gated trigger measurements
- ▶ EMF measurement application
- ▶ [page 11](#)

Model selection guide		
Feature	One-port model .02	Two-port model .12
Frequency upgrade to 4 GHz	•	•
Measurement wizard	•	•
R&S®InstrumentView support	•	•
R&S®MobileView support	•	•
DTF	•	•
Return loss and VSWR	•	•
Cable loss	•	•
Transmission (S_{21})	–	•
Spectrum analysis, 5 kHz to 3 GHz or 4 GHz	–	•
Tracking generator capability	–	•
Signal generator capability	–	•
Internal bias tee	–	•
Ideal for cable and antenna measurement and troubleshooting	•	•
Ideal for verifying signal transmission	–	•
Ideal for interference hunting	–	•

FAST

Change settings quickly and easily

Thanks to its hybrid design, the analyzer can be operated as usual via the keys and rotary knob or alternatively via the touchscreen. The keys are large and widely spaced. This makes the analyzer ideal for operation with gloves and also minimizes the big finger problem.

The R&S®CableRider ZPH offers a new kind of user experience with its built-in sensitive capacitive touchscreen:

- ▶ Directly interact with the elements on the screen
- ▶ Access menus faster
- ▶ Change frequency and span
- ▶ Add/move/delete markers
- ▶ Change other settings, etc.

Fastest measurement speed

The R&S®CableRider ZPH has extremely fast synthesizers that yield the shortest measurement time per data point (0.3 ms/point) for reflection measurements. The measurement speed is so fast that the measurement time is not compromised even when you set more data points to see details. With 2001 data points set, for example, the measurement time is only 0.6 s whereas other analyzers can take anywhere from 1.4 s to 30 s.

Fastest boot and warm-up times

Waiting a long time for an analyzer to boot and warm up can be frustrating. The R&S®CableRider ZPH boots up in less than 15 s and only needs 1 minute to warm up. This helps alleviate the frustration of waiting for the analyzer in order to start the first measurement.




Fast measurements – no calibration required

Understanding the need to perform measurements quickly, the R&S®CableRider ZPH is factory-precalibrated over the supported frequency and temperature ranges. The factory calibration removes the drift error, which can be a hassle when you have to keep calibrating because the measured frequency and operating temperature change. No calibration reminder will pop up on the screen and interrupt measurements. The Rohde&Schwarz calibration lab performs stringent calibration during production to minimize measurement errors and provide reliable measurement results. A calibration certificate is included with the analyzer. When the calibration interval has lapsed, the analyzer can be sent back to Rohde&Schwarz for recalibration.

Fast deployment with the wizard function

For fast deployment, all settings and measurement steps can be preconfigured using the wizard function. The field technician only needs to execute the test sequences as shown on the display. The measurement instructions can be in pictorial form with short descriptions to provide clear step-by-step guidance for the field technician. The settings for each test sequence are preconfigured, eliminating the need to provide special dedicated operational training for the field technician. Since there is no need to change settings for different measurements, test time is reduced during installation and maintenance. For the same measurement at multiple sites, simply load the measurement set to all analyzers – fast deployment thanks to the wizard function.

Typical deployment setup with measurement preparation and postprocessing

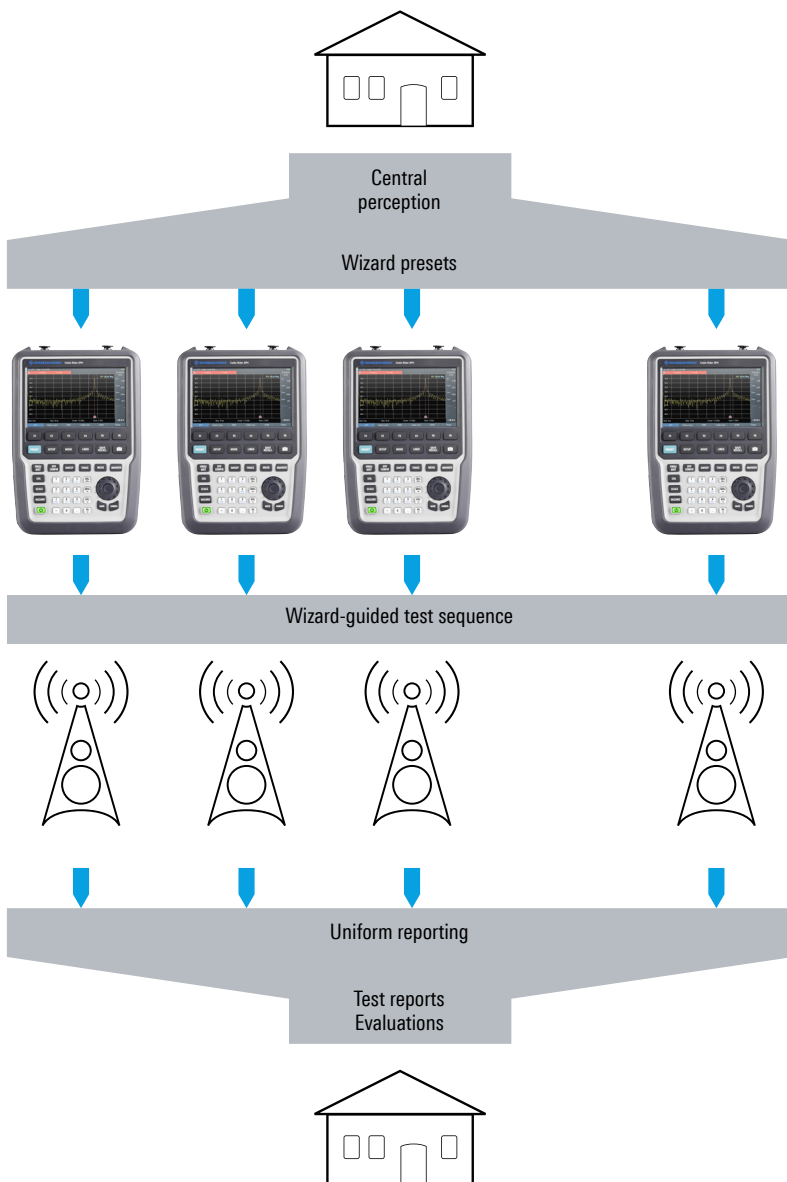

EFFICIENT

Single charge lasts the entire work day

With a single full charge, the R&S®CableRider ZPH will keep going an entire work day. Simply charge it for approximately 4 hours and the lithium-ion battery pack lasts up to 9 hours. The advantages of having a long-lasting battery are obvious – no need to bring an extra battery with additional weight when climbing up a mast or tower, no frustration due to the battery power ending in the middle of the measurement.

Buy what you need when you need it

The base unit supports frequencies from 2 MHz to 3 GHz in cable and antenna analyzer mode and 5 kHz to 3 GHz in spectrum analyzer mode. When you need frequencies up to 4 GHz, simply purchase the R&S®ZPH-B4 frequency upgrade option and enter the keycode into the analyzer. The supported frequency range is instantly extended to 4 GHz. It is not necessary to send the analyzer to the service lab for an upgrade or recalibration. No downtime and no need to buy a new analyzer just for frequency upgrading.

One-step calibration

Typically, calibration is not required if the DUT is connected directly to the analyzer. However, if there are additional cables or adapters connected between the analyzer and the device under test (DUT), calibration is recommended to eliminate any influences. During calibration, the analyzer calibrates with the open, short and load standard. For convenient, one-step calibration, the R&S®ZN-Z103 calibration unit automatically switches internally between open, short and load. This saves time and eliminates the hassle of physically changing the different calibration standards in the field.

Simplify measurements with the wizard function


The measurement wizard simplifies measurements by automating, standardizing and optimizing test sequences. A sequence of standardized and recurring measurements can be performed quickly and easily without mistakes. The proven wizard function helps eliminate human errors and helps the user make correct measurements from the beginning.

Remote control with Android or iOS apps

Not all qualified engineers are qualified climbers. An engineer on the ground might have to give the climber on the mast or tower instructions for every measurement step. Remote control of the R&S®CableRider ZPH solves this problem. Simply connect a commercially available wireless router¹⁾ to the analyzer and use the apps on the phone or tablet to remote control the analyzer and fully control the measurements.

¹⁾ The wireless router is not provided by Rohde&Schwarz.


Application example of wireless remote operation via tablet

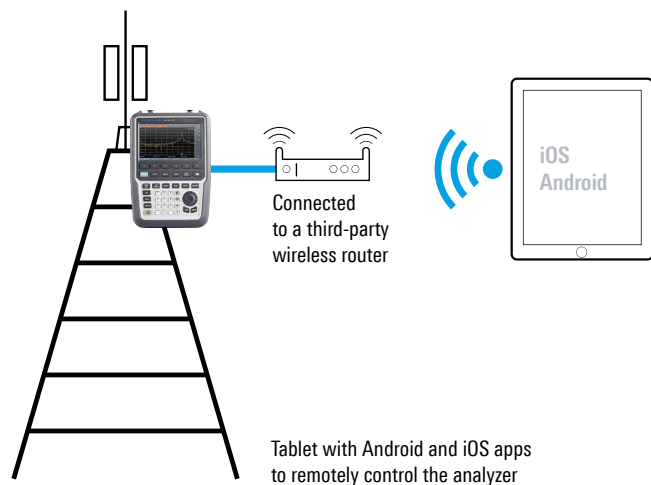


Three simple steps to work with the measurement wizard

- 1 Project manager/expert creates the test sequences
- 2 Operator uses the wizard to execute the test sequences
- 3 Operator shows the measurement result to the project manager/expert and documents it


OPERATIONG ELEMENTS

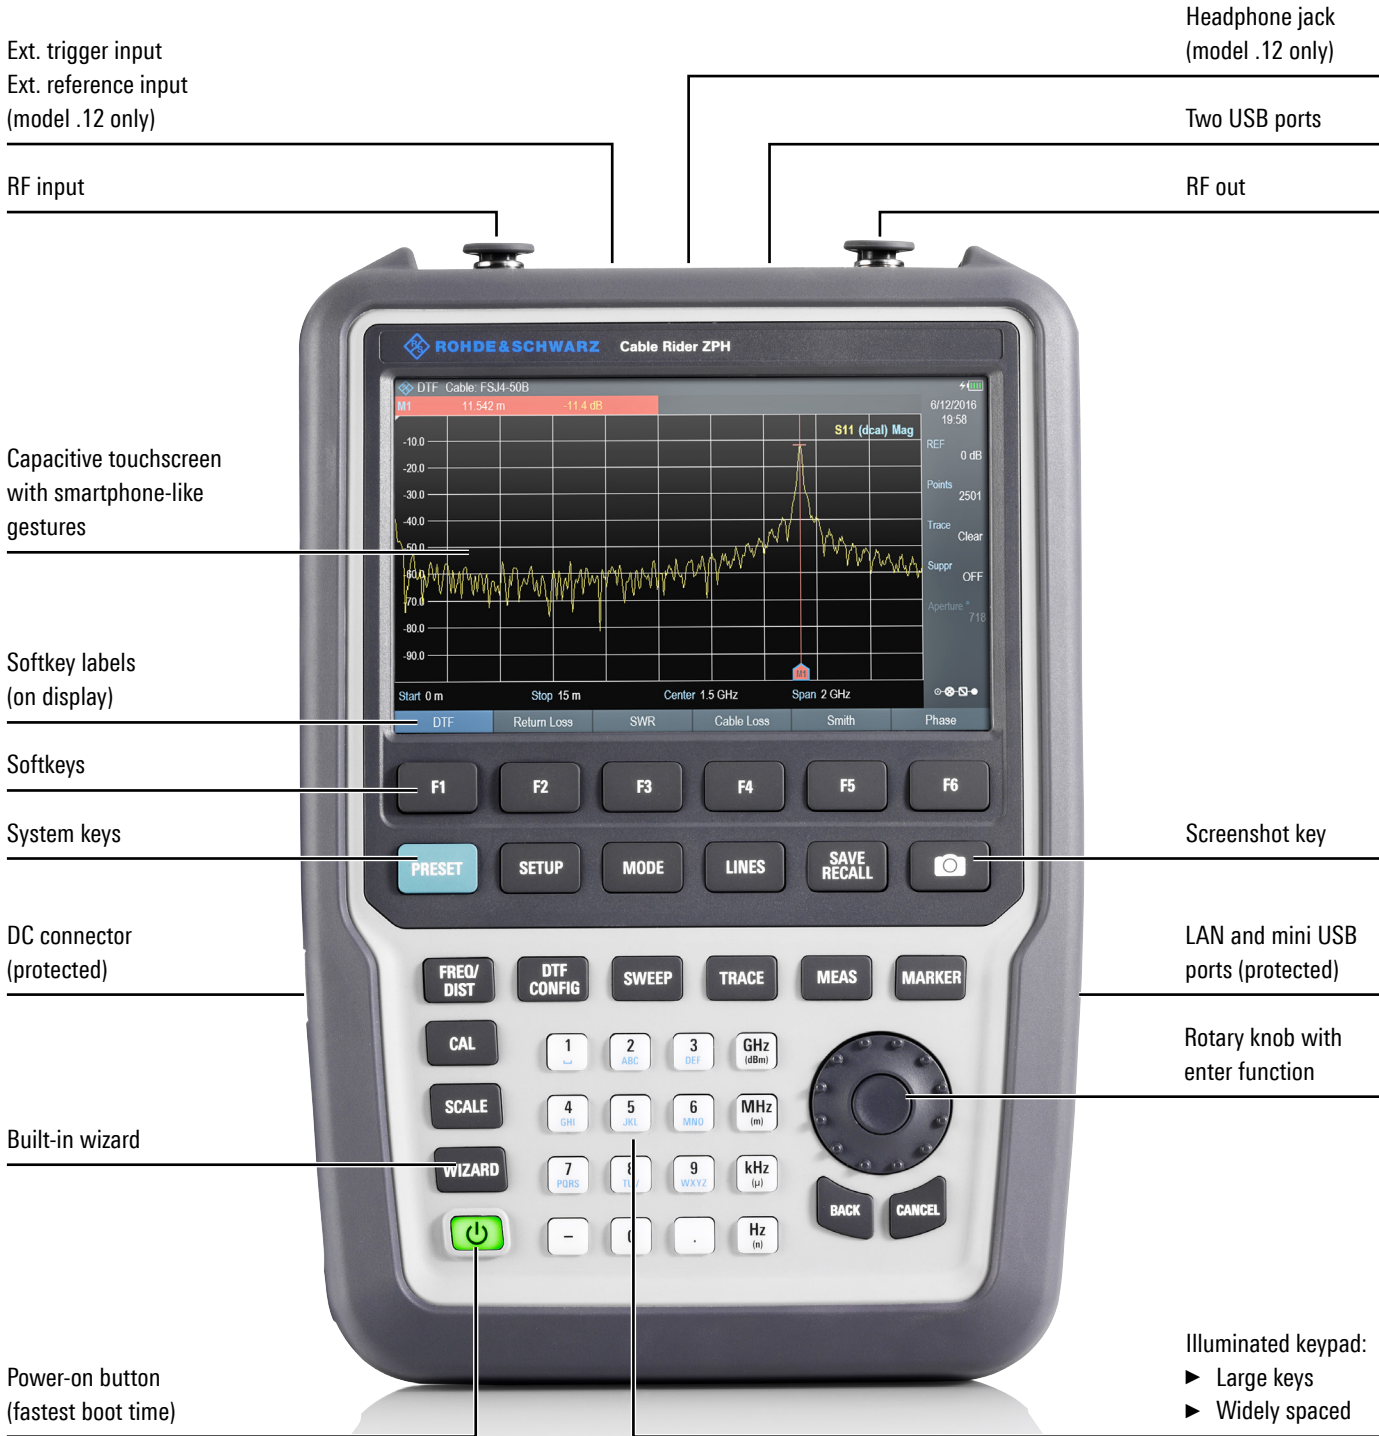


STANDARD MEASUREMENT MODES

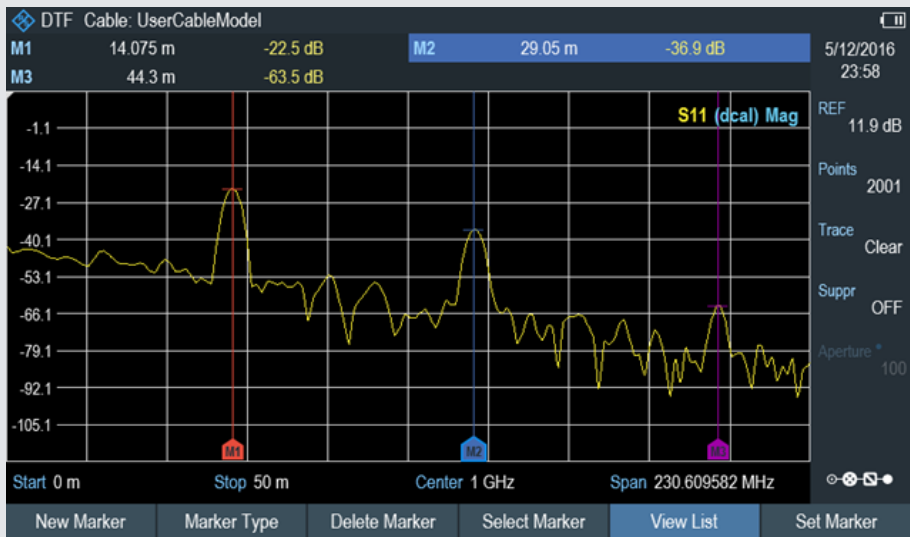


Distance-to-fault measurement

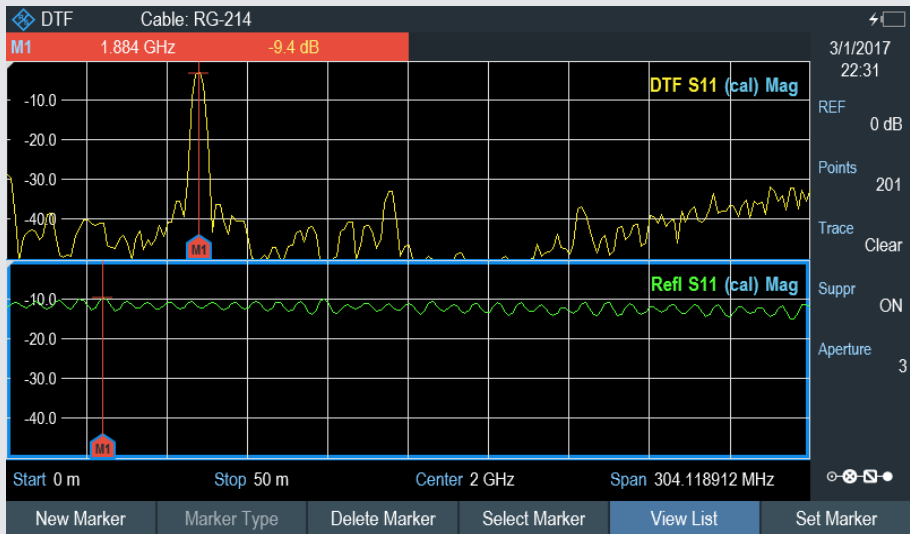


Distance-to-fault measurement and return loss:
combined measurement

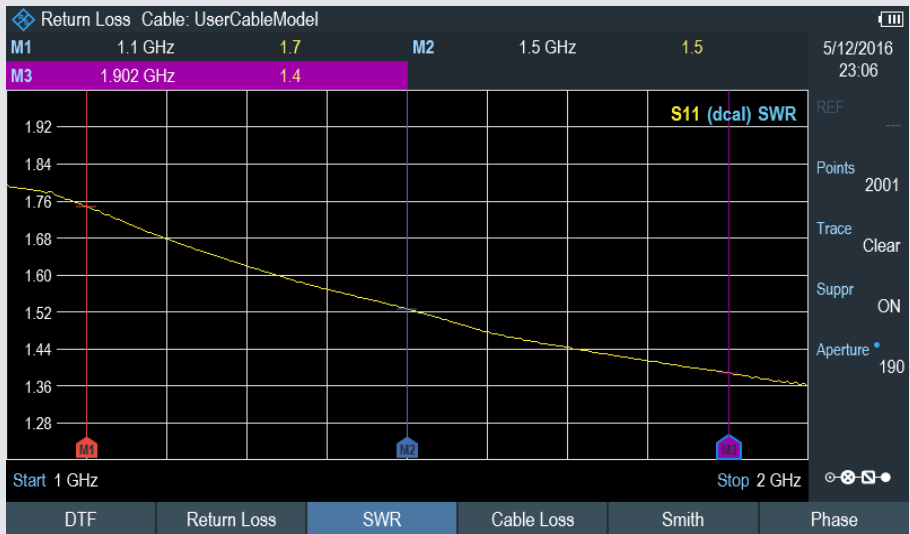


VSWR measurement

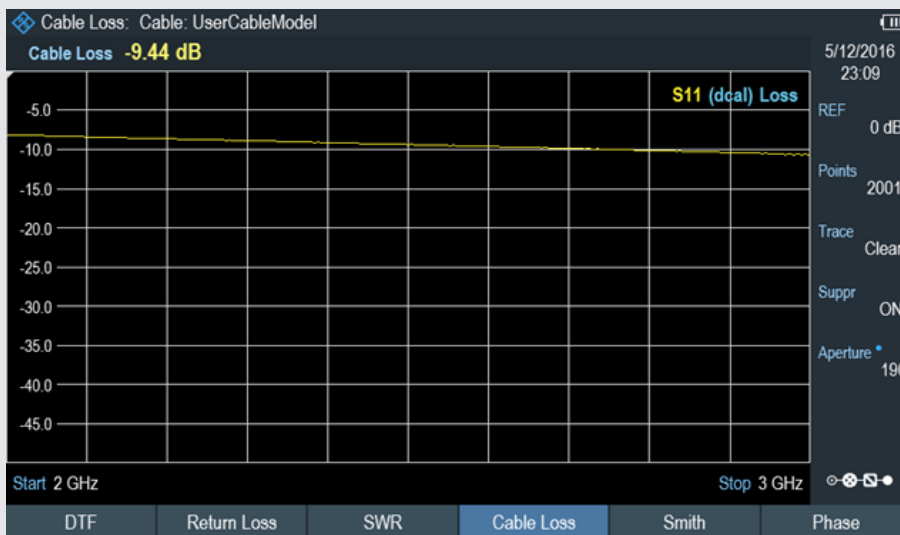

One-port cable loss measurement

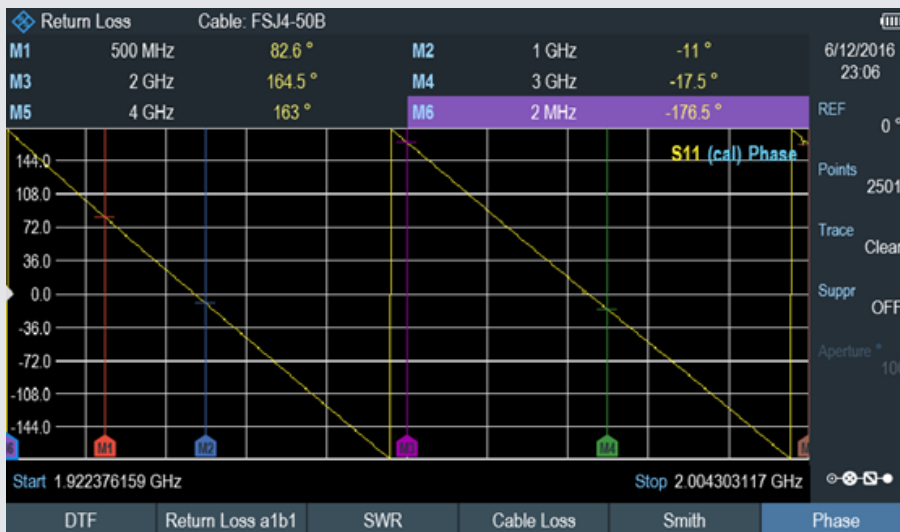

Phase display

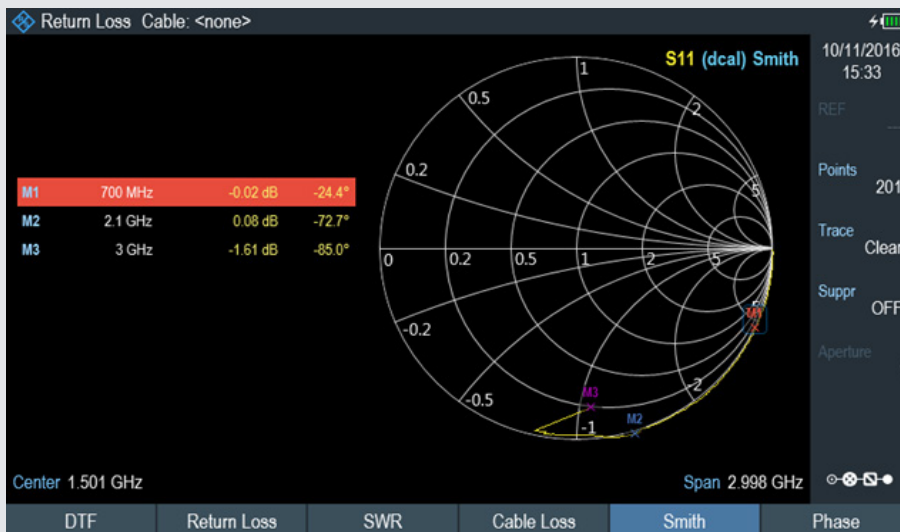

Smith chart display

OPTIONAL MEASUREMENT MODES

Power measurements with power sensors

Some applications require very high accuracy to measure and align transmitting power. The R&S®ZPH-K9 option allows the R&S®CableRider ZPH to perform power measurements together with the R&S®NRP-Zxx power sensor series, with a measurement range of -67 dBm to +45 dBm and covering frequencies up to 110 GHz.

Channel power meter

The R&S®ZPH-K19 channel power meter option converts the analyzer into a portable power meter with a level measurement accuracy of typically 0.5 dB. This option makes it possible to achieve power measurement results quickly and easily without needing a power sensor or the spectrum analyzer mode. This can help in applications such as checking power levels along the signal path of a field transmitter or verifying the power level of a design in the lab.



Pulse measurements with power sensors

The R&S®ZPH-K29 option enables precise pulse and peak power measurements using the R&S®CableRider ZPH together with a Rohde&Schwarz wideband power sensor. The wideband power sensors measure pulses with a resolution of up to 50 ns and support frequencies up to 44 GHz. This option is useful when the R&S®CableRider ZPH is used to install and maintain radar transmitter systems.

R&S®ZPH-K19 channel power meter



R&S®ZPH-K9 power sensor support

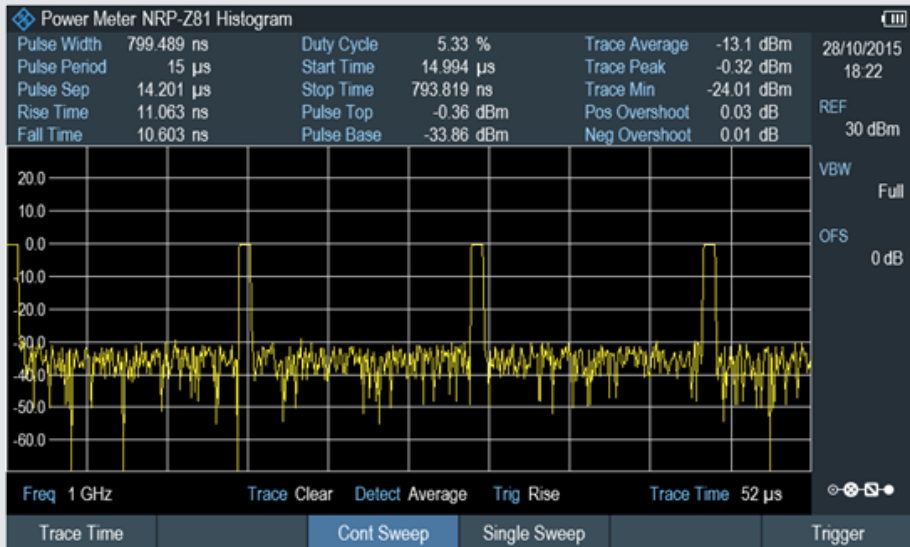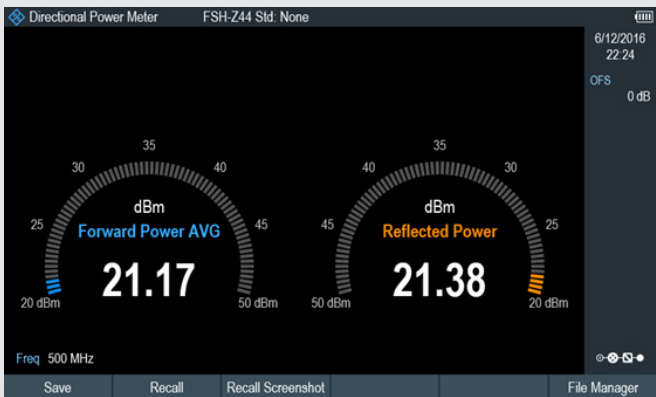

R&S®ZPH-K29 pulse measurement

MODEL-SPECIFIC MEASUREMENT MODES (TWO-PORT COMBI MODEL)


In many cases, field engineers need multiple instruments to complete their tasks: a cable and antenna analyzer, a spectrum analyzer, a signal generator and a bias source. The two-port combi model R&S®CableRider ZPH now combines all of these instruments into one powerful box.

Spectrum analysis performance including tracking generator


With its high sensitivity (DANL of typ. < -146 dBm up to 3 GHz), the R&S®CableRider ZPH is a powerful and easy-to-use spectrum analyzer for RF diagnostics in the field, e.g. on antenna RF feed signals. The DANL can be further improved to typ. -163 dBm with the optional R&S®ZPH-B22 preamplifier. The R&S®ZPH features tracking

generator functionality, which makes scalar transmission measurements possible, e.g. frequency response measurements on RF filters. Bias tees broaden the functionality even further, e.g. for measuring tower mounted amplifiers (TMA).

The R&S®CableRider ZPH can even utilize its unique independent signal source to operate as a continuous wave (CW) signal generator or as an independent tracking source for frequency conversion measurements.

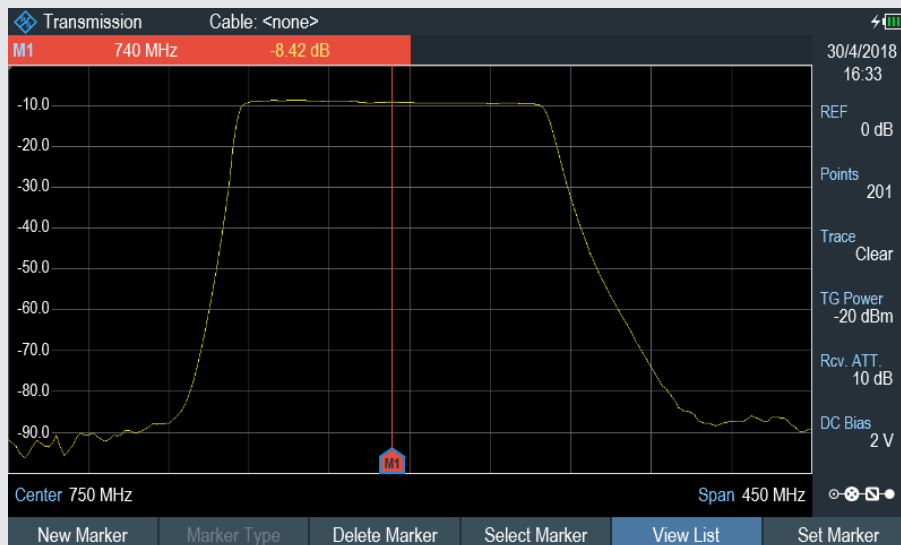

Filter transmission measurement with the R&S®ZPH-K1 option

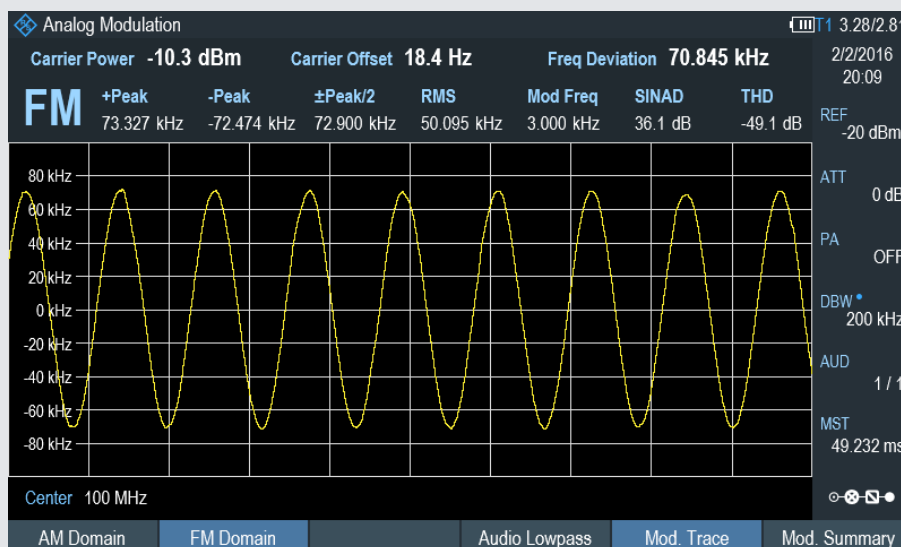

Analysis of a frequency-modulated signal with the R&S®ZPH-K7 modulation analysis option

Modulation analysis

The R&S®ZPH-K7 option converts the R&S®CableRider ZPH into a modulation analyzer to measure the quality of amplitude or frequency modulated signals. The analog modulation display shows the waveform as well as measurement parameters such as carrier power, carrier offset, modulation index (depth) for AM signals, frequency deviation for FM signals, SINAD and THD. The modulation summary display provides user-definable limits for each measurement. This feature is especially useful for installation and maintenance of AM/FM radio stations.


Basic digital modulation formats are used in many applications, e.g. near-field communications. The R&S®CableRider ZPH supports both ASK and FSK analysis. The digital modulation displays include trace, eye diagram, modulation error and symbol analysis. Specialized configuration presets for Bluetooth® Low Energy (Bluetooth® LE) and tire pressure monitoring systems (TPMS) are available, too. The R&S®ZPH-K7 option lets users easily verify the quality of the basic modulated signals.

Interference analysis and signal strength mapping


The R&S®ZPH-K15 interference analysis and R&S®ZPH-K16 signal strength mapping options are great tools for analyzing and locating ambiguous signals or interferers.

Long-term spectrogram recording allows up to 999 hours of on-air activity to be captured; the recording duration depends on the recording interval setting. The recorded data can be analyzed on the R&S®ZPH or with the R&S®InstrumentView software.

Signal strength mapping displays a pictorial view of the signal power level on an indoor or outdoor map. The color indicator provides a good estimation of the signal coverage in a particular area or where the interferer or intended signal is most likely located.

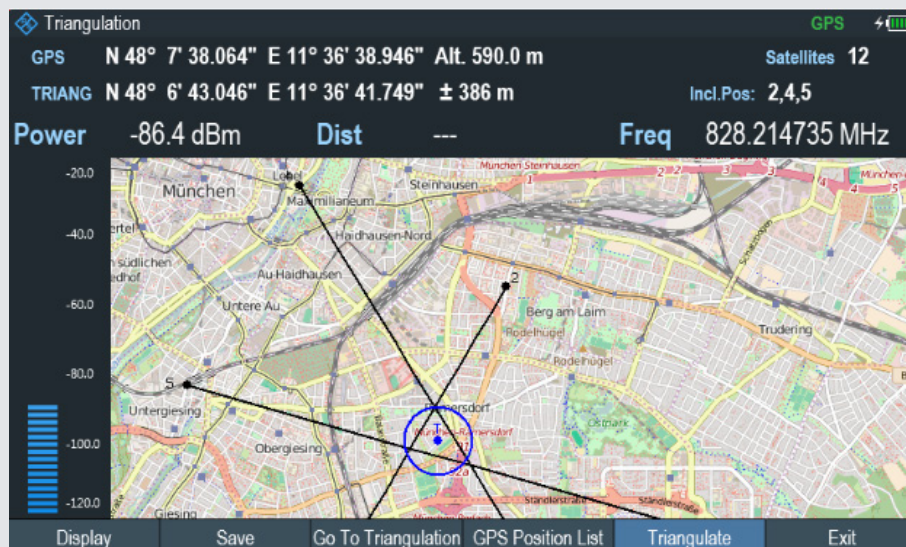

Locating a signal with the R&S®ZPH-K15 interference analysis option and the R&S®HE400 directional antenna

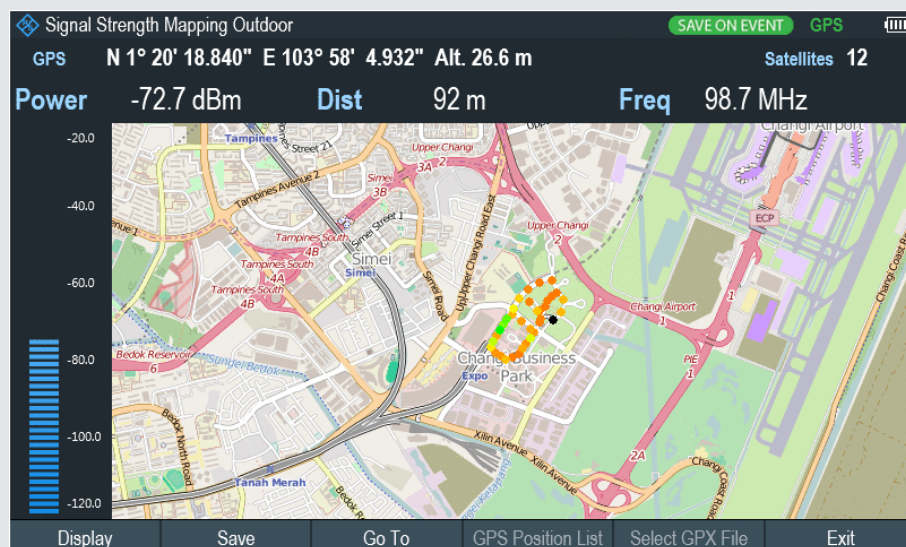

Display of the interferer signal strength on the map with the R&S®ZPH-K16 signal strength mapping option


Advanced gated trigger measurements

In spectrum analyzer mode (including channel power and spectrogram mode), the R&S®CableRider ZPH supports a gated trigger function. The gated trigger is useful for displaying weak uplink signals that are normally buried by strong downlink signals in TDD networks.


The R&S®ZPH-K57 advanced gated trigger measurements option can extend functions to include occupied bandwidth (OBW), adjacent channel leakage ratio (ACLR) and spectrum emission mask (SEM) measurement modes. The standard gated trigger and new advanced gated trigger measurement options help assess network quality and easily identify interferers.

EMF measurement application

The R&S®ZPH-K105 option supports automated test sequences for frequency selective measurements. R&S®InstrumentView software conveniently configures these measurements. The configuration setup covers one or several sub-measurements on various frequencies or channels and can include setting EMF emission limits in line with national and international standards during configuration or after measurement. This provides a quick overview of whether the transmitter system complies with the applicable safety exposure limits. Pre-configuration is done in the lab, saving time and effort in the field. With just a few clicks, all test sequences are executed automatically. The result can be previewed on the analyzer or with R&S®InstrumentView software to analyze and document the results.

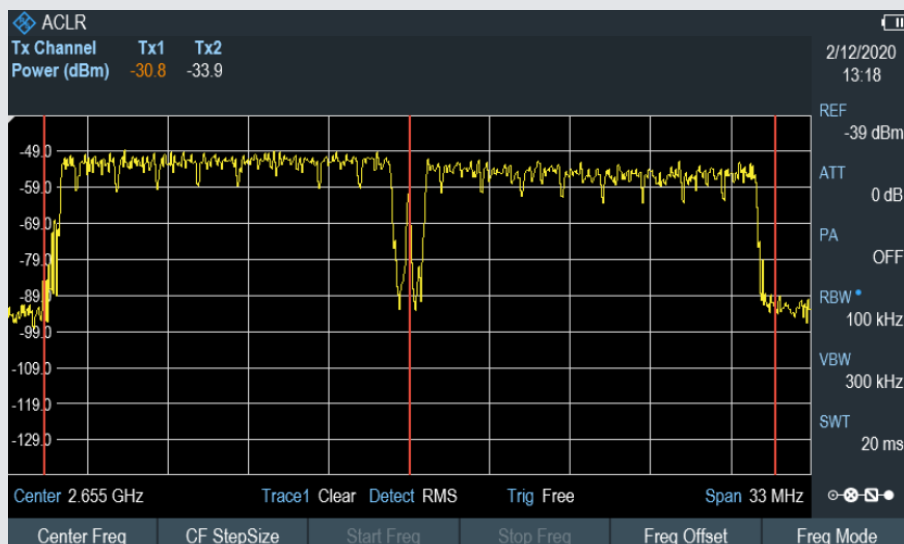

Gated trigger in ACLR mode with advanced the R&S®ZPH-K57 advanced gated trigger measurements option

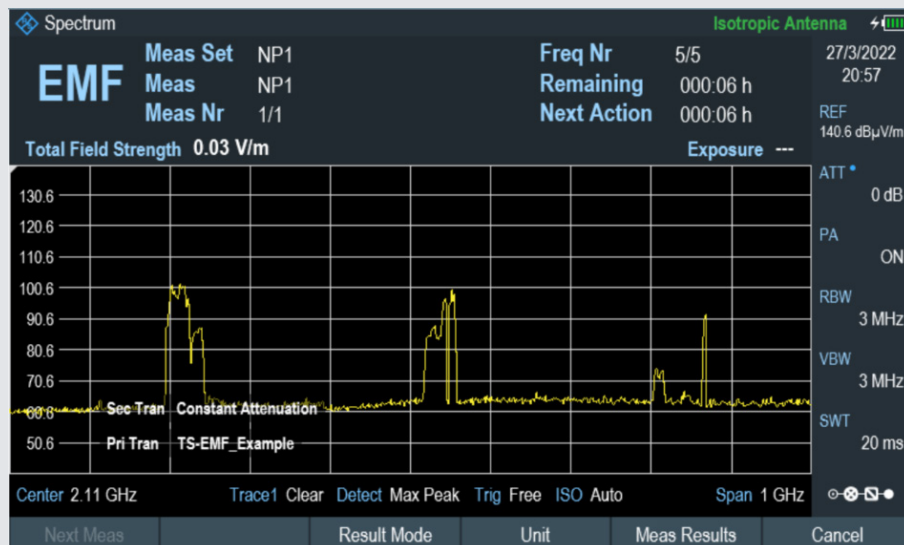

Frequency selective measurement with the R&S®ZPH-K105 EMF measurement application option

SPECIFICATIONS IN BRIEF

Specifications in brief		
Frequency range	R&S®CableRider ZPH (one-port model .02)	2 MHz to 3 GHz
	with R&S®ZPH-B4 option	2 MHz to 4 GHz
	R&S®CableRider ZPH (two-port combi model .12)	
	with R&S®ZPH-K1 option	5 kHz to 3 GHz
	with R&S®ZPH-B4 and R&S®ZPH-K1 options	5 kHz to 4 GHz
Frequency resolution		1 Hz
Spectrum measurement with combi model .12 only, with R&S®ZPH-K1 option		
Spectral purity, SSB phase noise	f = 500 MHz, carrier offset 30 kHz	< -88 dBc (1 Hz), typ. -95 dBc (1 Hz)
	f = 500 MHz, carrier offset 100 kHz	< -98 dBc (1 Hz), typ. -105 dBc (1 Hz)
	f = 500 MHz, carrier offset 1 MHz	< -118 dBc (1 Hz), typ. -125 dBc (1 Hz)
Displayed average noise level (DANL)	0 dB RF attenuation, termination 50 Ω, RBW = 1 kHz, VBW = 10 Hz, sample detector, log scaling, normalized to 1 Hz	
	frequency preamplifier = off	
	1 MHz to 10 MHz	< -130 dBm, typ. -135 dBm
	10 MHz to 1 GHz	< -142 dBm, typ. -146 dBm
	1 GHz to 4 GHz	< -140 dBm, typ. -144 dBm
	frequency preamplifier = on	
	1 MHz to 10 MHz	< -150 dBm, typ. -160 dBm
	10 MHz to 3 GHz	< -158 dBm, typ. -163 dBm
	3 GHz to 4 GHz	< -156 dBm, typ. -161 dBm
Individual measurements		reflection (S_{11}), one-port cable loss, distance-to-fault
Port output power	controlled via tracking generator attenuation	-10 dBm (nom.)
Maximum permissible spurious signal	measurement = reflection (S_{11})/one-port cable loss/distance-to-fault analysis	+17 dBm (nom.)
Data points	selectable	101 to 2501
Reflection measurement S_{11}		
Corrected directivity with R&S®ZN-Z103 option	2 MHz ≤ f ≤ 4 GHz (with R&S®ZPH-B4 option)	> 42 dB (nom.)
Measurement speed		0.3 ms/point
Result formats		magnitude, VSWR, magnitude and distance-to-fault, VSWR and distance-to-fault
One-port cable loss measurement		
Result format		magnitude
Range	selectable	1/2/5/10/20/50/100/120/150 dB
Distance-to-fault analysis		
Result formats		return loss (dB), VSWR
Fault resolution		1.5 m × 108 m × velocity factor/span
Maximum cable length	depending on cable loss	1500 m (nom.)
Maximum rated input levels		
DC voltage		50 V
CW RF power	model .02: port 1 (power meter input)	30 dBm
	model .12: port 1 (RF input)	20 dBm
	port 2 (reflectometer input)	23 dBm
General data		
Display resolution	WVGA	800 × 480 pixel
Battery (R&S®HA-Z306 option)	capacity	72 Wh
	voltage	11.25 V (nom.)
Operating time with new, fully charged battery	one-port model .02	9 h
	two-port combi model .12, spectrum analyzer mode	9 h
	two-port combi model .12, cable and antenna analyzer mode	6.5 h
Dimensions	W × H × D	202 mm × 294 mm × 76 mm (8.0 in × 11.6 in × 3 in)
Weight		2.5 kg (5.5 lb)

ORDERING INFORMATION

Designation	Type	Order No.
Base unit (includes accessories such as power cable, manual)		
Handheld cable and antenna analyzer, 2 MHz to 3 GHz	R&S®Cable Rider ZPH	1321.1211.02
Handheld cable and antenna analyzer, combi model, 5 kHz to 3 GHz	R&S®Cable Rider ZPH	1321.1211.12
Options (for model .02 and model .12)		
Frequency upgrade, 3 GHz to 4 GHz	R&S®ZPH-B4	1321.0380.02
Power sensor support	R&S®ZPH-K9	1321.0415.02
Channel power meter	R&S®ZPH-K19	1321.0409.02
Pulse measurements with power sensor	R&S®ZPH-K29	1321.0421.02
Option (for model .02 only)		
GPS support	R&S®ZPH-B10	1321.0396.02
Options (for model .12 only)		
Spectrum analyzer preamplifier (requires R&S®ZPH-K1)	R&S®ZPH-B22	1334.5627.02
Spectrum analysis measurement application	R&S®ZPH-K1	1334.5604.02
Modulation analysis AM/FM/ASK/FSK (requires R&S®ZPH-K1)	R&S®ZPH-K7	1334.5633.02
Interference analysis (requires R&S®ZPH-K1)	R&S®ZPH-K15	1334.5640.02
Signal strength mapping measurement application (requires R&S®ZPH-K1)	R&S®ZPH-K16	1334.5656.02
Advanced gated trigger measurements (requires R&S®ZPH-K1)	R&S®ZPH-K57	1334.5685.02
EMF measurement application	R&S®ZPH-K105	1334.7207.02
Accessories		
Calibration unit	R&S®ZN-Z103	1321.1828.02
Combined open/short/50 Ω load calibration standard, for calibrating the VSWR and DTF measurements, DC to 3.6 GHz	R&S®FSH-Z29	1300.7510.03
Battery charger for R&S®HA-Z306	R&S®HA-Z303	1321.1328.02
Lithium-ion battery pack, 6.4 Ah	R&S®HA-Z306	1321.1334.02
Spare power supply, incl. mains plug for EU, GB, US, AUS, CH	R&S®HA-Z301	1321.1386.02
Car adapter	R&S®HA-Z302	1321.1340.02
Headphones	R&S®FSH-Z36	1145.5838.02
Spare USB cable	R&S®HA-Z211	1309.6169.00
Spare Ethernet cable	R&S®HA-Z210	1309.6152.00
Soft carrying bag	R&S®HA-Z220	1309.6175.00
Hard case	R&S®HA-Z321	1321.1357.02
Hard shell protective carrying case	R&S®RTH-Z4	1326.2774.02
Carrying holster	R&S®HA-Z322	1321.1370.02
Rainproof carrying holster	R&S®HA-Z322	1321.1370.03
Antennas and accessories		
RF cable (length: 1 m), DC to 8 GHz, armored, N male/N female connectors	R&S®FSH-Z320	1309.6600.00
RF cable (length: 3 m), DC to 8 GHz, armored, N male/N female connectors	R&S®FSH-Z321	1309.6617.00
Matching pad, 50/75 Ω, L section	R&S®RAM	0358.5414.02
Matching pad, 50/75 Ω, series resistor 25 Ω	R&S®RAZ	0358.5714.02
Matching pad, 50/75 Ω, L section, N to BNC	R&S®FSH-Z38	1300.7740.02
Adapter N (m) – BNC (f)		0118.2812.00
Adapter N (m) – N (m)		0092.6581.00
Adapter N (m) – SMA (f)		4012.5837.00
Adapter N (f) – SMA (f)		3692.7660.00
Adapter N (m) – 7/16 (f)		3530.6646.00
Adapter N (m) – 7/16 (m)		3530.6630.00
Adapter N (m) – FME (f)		4048.9790.00
Adapter BNC (m) – banana (f)		0017.6742.00
Attenuator, 50 W, 20 dB, 50 Ω, DC to 6 GHz, N (f) – N (m)	R&S®RDL50	1035.1700.52
Attenuator, 100 W, 20 dB, 50 Ω, DC to 2 GHz, N (f) – N (m)	R&S®RBU100	1073.8495.20
Attenuator, 100 W, 30 dB, 50 Ω, DC to 2 GHz, N (f) – N (m)	R&S®RBU100	1073.8495.30
Handheld directional antenna (with antenna handle)	R&S®HE400BC	4104.6000.04

Designation	Type	Order No.
Cable set for R&S®HE400BC (R&S®HE300USB required)	R&S®HE400-KB	4104.7770.04
Handheld directional antenna (with antenna handle)	R&S®HE400	4104.6000.02
Cable set for R&S®HE400 (R&S®HE300USB required)	R&S®HE400-K	4104.7770.02
HF antenna module, 8.3 kHz to 30 MHz	R&S®HE400HF	4104.8002.02
VHF antenna module, 20 MHz to 200 MHz	R&S®HE400VHF	4104.8202.02
UWB antenna module, 30 MHz to 6 GHz	R&S®HE400UWB	4104.6900.02
Log-periodic antenna module, 450 MHz to 8 GHz	R&S®HE400LP	4104.8402.02
Cellular antenna module, 700 MHz to 2500 MHz	R&S®HE400CEL	4104.7306.02
USB adapter, for R&S®HE300/R&S®HL300	R&S®HE300USB	4080.9440.02
Log-periodic OEM antenna, 700 MHz to 4 GHz	R&S®HA-Z350	1321.1405.02
Yagi antenna, 1710 MHz to 1990 MHz	R&S®HA-Z1900	1328.6825.02
Yagi antenna, 824 MHz to 960 MHz	R&S®HA-Z900	1328.6283.02
Telescopic antenna	R&S®CS-ZANT	4500.7470.00
RF cable (length: 1 m), DC to 6 GHz, N male/N male connectors	R&S®HA-Z901	3626.2757.02
Carrying bag, for R&S®HA-Z900 or R&S®HA-Z1900 Yagi antenna	R&S®HA-Z902	1328.6883.02
Compact probe set for E and H near-field measurements, 30 MHz to 3 GHz	R&S®HZ-15	1147.2736.02
Near-field probe set H field	R&S®HZ-17	1339.4141.02
Preamplifier (3 GHz, 20 dB), power adapter (100 V to 230 V), for R&S®HZ-15	R&S®HZ-16	1147.2720.02
Portable EMF measurement system, hardcase	R&S®TS-EMF	1158.9295.06
Isotropic antenna, 30 MHz to 3 GHz	R&S®TSEMF-B1	1074.5719.02
Isotropic antenna, 700 MHz to 6 GHz	R&S®TSEMF-B2	1074.5702.02
Isotropic antenna, 9 kHz to 200 MHz	R&S®TSEMF-B3	1074.5690.02
Converter cable	R&S®TSEMF-CV	1158.9250.02
Power sensors supported by the R&S®Cable Rider ZPH		
Directional power sensor, 25 MHz to 1 GHz	R&S®FSH-Z14	1444.0029.02
Directional power sensor, 200 MHz to 4 GHz	R&S®FSH-Z44	1444.0035.02
Universal power sensor, 10 MHz to 8 GHz, 100 mW, two-path	R&S®NRP-Z211	1417.0409.02
Universal power sensor, 10 MHz to 18 GHz, 100 mW, two-path	R&S®NRP-Z221	1417.0309.02
Wideband power sensor, 50 MHz to 18 GHz, 100 mW	R&S®NRP-Z81	1137.9009.02
Wideband power sensor, 50 MHz to 40 GHz, 100 mW (2.92 mm)	R&S®NRP-Z85	1411.7501.02
Wideband power sensor, 50 MHz to 40 GHz, 100 mW (2.40 mm)	R&S®NRP-Z86	1417.0109.40
Wideband power sensor, 50 MHz to 44 GHz, 100 mW (2.40 mm)	R&S®NRP-Z86	1417.0109.44
Three-path diode power sensor, 100 pW to 200 mW, 10 MHz to 8 GHz	R&S®NRP8S	1419.0006.02
Three-path diode power sensor, 100 pW to 200 mW, 10 MHz to 18 GHz	R&S®NRP18S	1419.0029.02
Three-path diode power sensor, 100 pW to 200 mW, 10 MHz to 33 GHz	R&S®NRP33S	1419.0064.02
Three-path diode power sensor, 100 pW to 200 mW, 50 MHz to 40 GHz	R&S®NRP40S	1419.0041.02
Three-path diode power sensor, 100 pW to 200 mW, 50 MHz to 50 GHz	R&S®NRP50S	1419.0087.02
Thermal power sensor, 300 nW to 100 mW, DC to 18 GHz	R&S®NRP18T	1424.6115.02
Thermal power sensor, 300 nW to 100 mW, DC to 33 GHz	R&S®NRP33T	1424.6138.02
Thermal power sensor, 300 nW to 100 mW, DC to 40 GHz	R&S®NRP40T	1424.6150.02
Thermal power sensor, 300 nW to 100 mW, DC to 50 GHz	R&S®NRP50T	1424.6173.02
Thermal power sensor, 300 nW to 100 mW, DC to 67 GHz	R&S®NRP67T	1424.6196.02
Thermal power sensor, 300 nW to 100 mW, DC to 110 GHz	R&S®NRP110T	1424.6215.02
Average power sensor, 100 pW to 200 mW, 8 kHz to 6 GHz	R&S®NRP6A	1424.6796.02
Average power sensor, 100 pW to 200 mW, 8 kHz to 18 GHz	R&S®NRP18A	1424.6815.02
Optical power sensors and accessories		
OEM USB optical power meter (germanium)	R&S®HA-Z360	1334.5162.00
OEM USB optical power meter (filtered InGaAs)	R&S®HA-Z361	1334.5179.00
SC adaptor for optical power meter	R&S®HA-Z362	1334.5185.00
LC adaptor for optical power meter	R&S®HA-Z363	1334.5191.00
2.5 mm universal adaptor for optical power meter	R&S®HA-Z364	1334.5204.00
1.25 mm universal adaptor for optical power meter	R&S®HA-Z365	1334.5210.00
Patch cord SC-LC SM, SX, length: 1 m	R&S®HA-Z366	1334.5227.00
Patch cord SC-SC SM, SX, length: 1 m	R&S®HA-Z367	1334.5233.00

Designation	Type	Order No.
The power sensors require the following adapter cable for operation with the R&S®Cable Rider ZPH		
USB adapter cable for R&S®FSH-Z14/R&S®FSH-Z44	R&S®FSH-Z144	1145.5909.02
USB adapter cable (passive), length: 2 m, to connect R&S®NRP-Zxx S/SN power sensors to the R&S®Cable Rider ZPH	R&S®NRP-Z4	1146.8001.02
R&S®NRP power sensors require the following adapter cable for operation with the R&S®Cable Rider ZPH		
USB interface cable, length: 1.5 m, to connect R&S®NRP-Zxx sensors to the R&S®Cable Rider ZPH	R&S®NRP-ZKU	1419.0658.03

Warranty		
Base unit		3 years
All other items ¹⁾		1 year
Options		
Extended warranty, one year	R&S®WE1	Please contact your local Rohde & Schwarz sales office.
Extended warranty, two years	R&S®WE2	
Extended warranty with calibration coverage, one year	R&S®CW1	
Extended warranty with calibration coverage, two years	R&S®CW2	
Extended warranty with accredited calibration coverage, one year	R&S®AW1	
Extended warranty with accredited calibration coverage, two years	R&S®AW2	

¹⁾ For options that are installed, the remaining base unit warranty applies if longer than 1 year. Exception: all batteries have a 1 year warranty.

Service that adds value

- ▶ Worldwide
- ▶ Local and personalized
- ▶ Customized and flexible
- ▶ Uncompromising quality
- ▶ Long-term dependability

Rohde & Schwarz

The Rohde & Schwarz technology group is among the trailblazers when it comes to paving the way for a safer and connected world with its leading solutions in test & measurement, technology systems and networks & cybersecurity. Founded more than 85 years ago, the group is a reliable partner for industry and government customers around the globe. The independent company is headquartered in Munich, Germany and has an extensive sales and service network with locations in more than 70 countries.

www.rohde-schwarz.com

Sustainable product design

- ▶ Environmental compatibility and eco-footprint
- ▶ Energy efficiency and low emissions
- ▶ Longevity and optimized total cost of ownership

Certified Quality Management

ISO 9001

Certified Environmental Management

ISO 14001

Rohde & Schwarz training

www.training.rohde-schwarz.com

Rohde & Schwarz customer support

www.rohde-schwarz.com/support



DONHO
唐和股份有限公司



donho.com.tw

台北總公司

台北市內湖區瑞光路618號8樓
02 2627 1088

台中分公司

台中市西屯區朝富路213號22樓-2
04 2252 5037

高雄分公司

高雄市楠梓區德民路220號
07 365 1388

R&S® is a registered trademark of Rohde & Schwarz GmbH & Co. KG
Trade names are trademarks of the owners
PD 3607.6638.12 | Version 04.01 | May 2022 (ja)
R&S® Cable Rider ZPHCable and Antenna Analyzer
Data without tolerance limits is not binding | Subject to change
© 2017 - 2022 Rohde & Schwarz GmbH & Co. KG | 81671 Munich, Germany