


Product

KHA 0760



KHA-0760 is crimping tool for insulated heat shrink connectors, 0.5 - 6.0 mm²/AWG 22- 10 (red, blue, yellow), Oval-Crimp symmetric.

- High strength, through hardened alloy steel construction
- Unique mechanism significantly reduces hand force requirement over competing crimping tools
- Versatile and easy to customize for right hand or left hand users.
- Non-slip pad holds tool in place when leveraging on a work surface
- Full cycle crimp mechanism to ensure consistent, reliable crimp
- Ratchet release mechanism to clear miscrimps and obstructions
- Precision eccentric adjustment for consistent performance and ability to calibrate
- Hole in handle allows attachment of safety strap
- Each tool has a unique serial number for traceability.

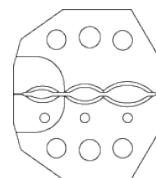

Die profile



Crimp profile

TECHNICAL DATA

Length: 256 mm/10.08"

Width: 22 mm/0.87"

Height: 80 mm/3.15"

Weight: 550 gr/1.21 lb

Wire size: 0.5-6 mm² / AWG 22-AWG 10

Crimp dimensions mm/mm²:
0,50 - 1,5 mm²/1,5 - 2,5 mm²/4 - 6 mm²

Crimp dimensions inch/AWG:
AWG 22 - AWG 16/AWG 16 - AWG 14/AWG 12 - AWG 10

Connector: Heat shrink connectors
Description: For pre insulated red, blue and yellow heat shrink connectors.

Life span, cycles: 50,000